



Basic Sashmate Top Hung Assembly


1

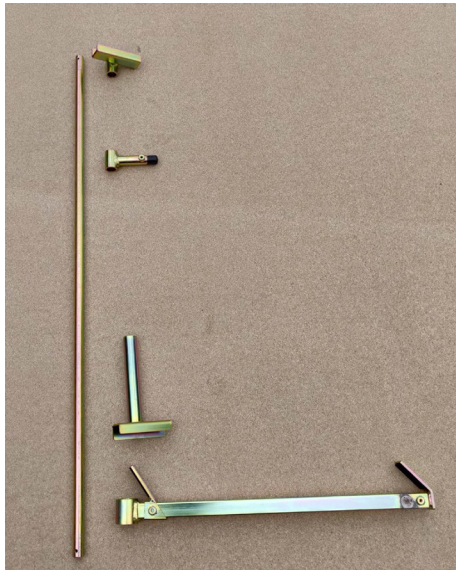

2

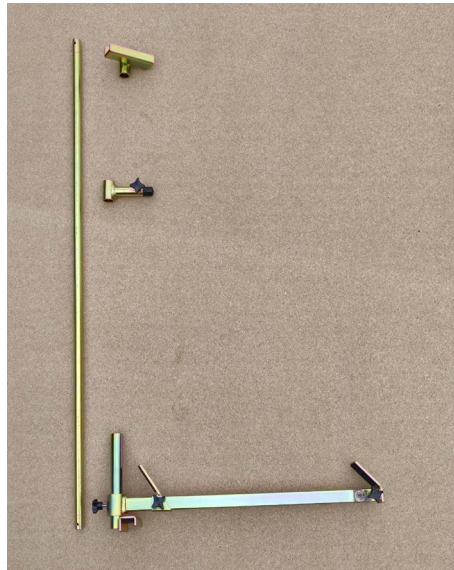

3

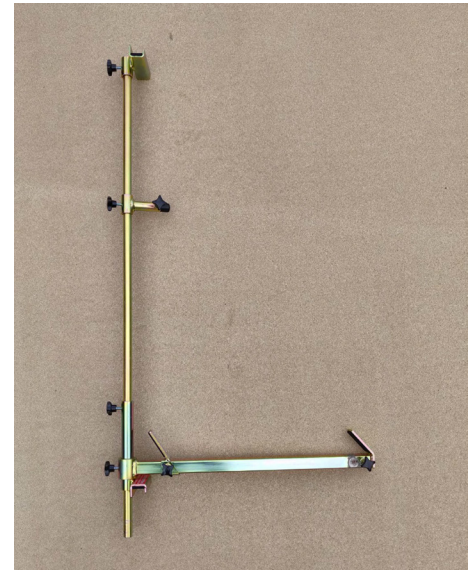

Small vent setup (above transom bar)



The 'Top Vent Angle' is used for small vents as shown here in the middle of the horizontal arm.

Repairs above a transom bar.

The top clamp is positioned at the top of the main rod for repairs on the top sash in a window and any excess main rod faces downwards in front of the fixed/opening sash below the transom bar.

Large vent setup (above transom bar)



Repairs below a transom bar.

The bottom clamp is positioned at the bottom of the main rod for repairs on the bottom sash in a window and any excess main rod faces upwards in front of the fixed/opening sash above the transom bar.

Repairs between transom bars.

The excess main rod is positioned to cover the opening/fixing sashes above and below the transom bars.

Top Hung Assembly with Telescopic Main Rods

1



2



3



4



5



6



The Telescopic Main Rods can be used with the Sashmate Side Hung or the Sashmate Top Hung.

The Telescopic Main Rods include a short and long inner main rod.


Short, to enable the Sashmate to fit into small 'complete opening windows' less than around 650mm in height.

Long, to enable the Sashmate to be used on taller sashes.


The Sashmate Top Hung bottom clamp can be used with the short inner main rod to allow small top vent repairs on short windows.

Top Hung Assembly with Top Hung Rolling Bar

1

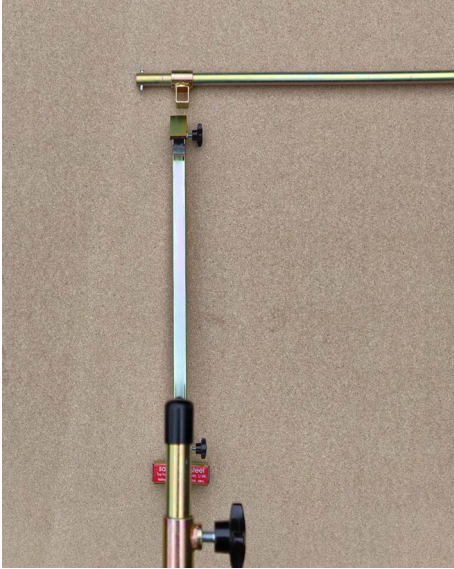

2

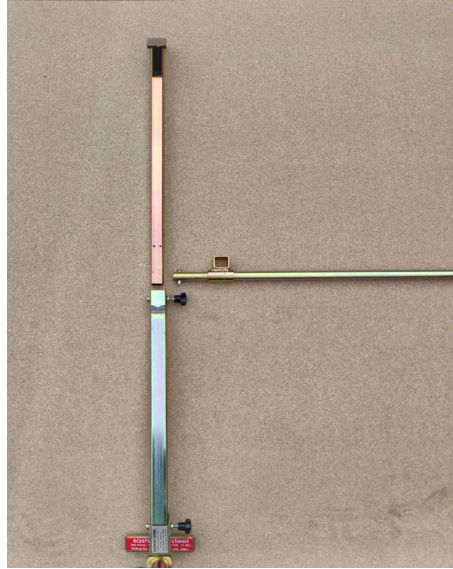

3



This procedure is carried out with the Sashmate Top Hung installed with the horizontal sledges removed before installation.


One sledge is passed through the Rolling Bar and back into the horizontal arm, and screwed tight. The second sledge is then passed through the Rolling Bar and into the horizontal arm, screwed tight also.

Top Hung Assembly with Top Hung Drop Set


1




2

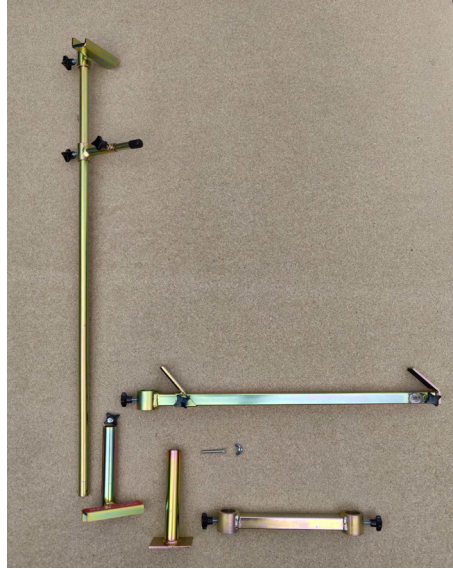

3

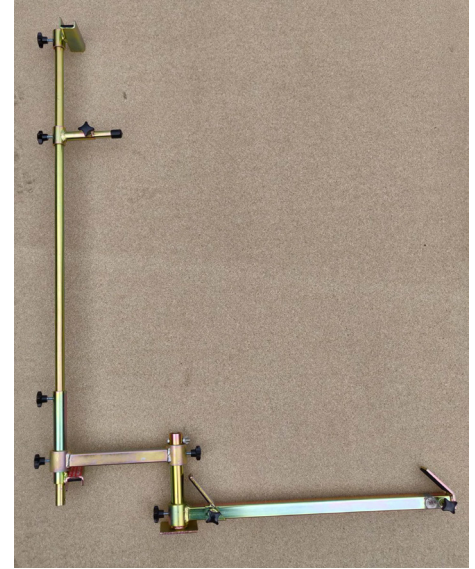

4

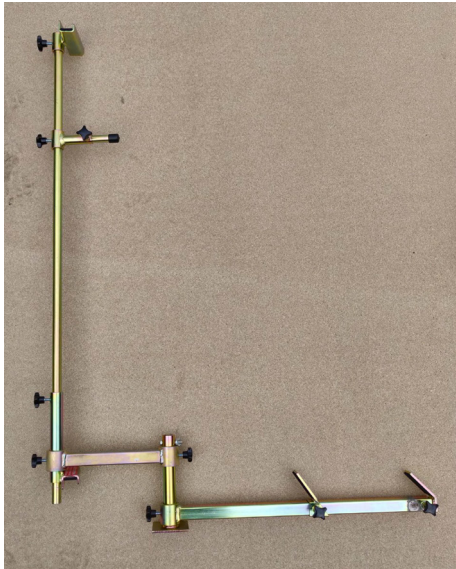

The 'Top Vent Angle' is normally used when the Top Hung Drop Set is fitted, as shown here in the middle of the horizontal arm.

Use the Top Hung Drop Set to support the twisted sash. Once the hinges have been replaced remove the Drop Set and set the Sashmate Top Hung up in the usual way before re-fitting the sash.